

35mm/JX240 & MULTI-FORMAT FILM SCANNERS

SUPER COOLSCAN 9000 ED SUPER COOLSCAN 5000 ED COOLSCAN V ED

At the heart of the 'mage





Three new achievements from the leader in desktop film scanning

Dynamic, sophisticated core technologies. A history of excellence in digital imaging. World-renowned optics. These are the attributes that have made Nikon the dominant force in the desktop film scanning market.

Nikon's COOLSCAN lineup features three models, each offering superior optical components, color reproduction and image correction functions, along with incomparable operability. Every model, however, also possesses defining capabilities that, when integrated with Nikon's advanced core technologies, make each COOLSCAN scanner the best in its class. Whether for home use or for application in small- to large-scale business operations, Nikon COOLSCAN desktop film scanners get the job done — better and faster than any in the field.

COOLSCAN V ED

Welcome to imaging excellence

- •High-quality scanning of 35mm (135) format film
- •4,000 dpi optical resolution and 14-bit A/D converter
- •Plug-and-play USB 2.0 interface for rapid transfer of image data
- Fast 38-second scanning
- Digital ICE⁴ Advanced[™]

SUPER COOLSCANSOOD ED

The speed and performance of a leader

- •High-quality, high-speed scanning of 35mm (135) format film
- •Ultra-fast 20-second scanning
- •4,000 dpi optical resolution and 16-bit A/D converter
- Plug-and-play USB 2.0 interface for rapid transfer of image data
- Digital ICE⁴ Advanced™



SUPER COOLSCAN 9000 ED

Multi-format scanning at its finest

- •High-quality scanning of multiple film formats (120/220, 35mm, etc.)
- •4,000 dpi optical resolution and 16-bit A/D converter
- High-speed IEEE 1394 interface
- •High-speed scanning (35mm slides: 40 seconds; 6 x 9: 185 seconds)
- •Digital ICE⁴ Advanced™ with Digital ICE Professional™

The Nikon Difference — exclusive core technologies for unrivaled performance

In the decade since Nikon unveiled the first COOLSCAN film scanner, we have accumulated considerable expertise and applied it to the development of exclusive, cutting-edge technologies. They serve as the foundation for the unparalleled performance offered by each model in the COOLSCAN lineup.

Scanner Nikkor ED lens



The single most important element in the production of high-quality scans is the lens. As you would expect from a world leader in optical technology, Nikon has incorporated lenses of the highest quality in each of our film scanners.

Compared to ordinary glass, our ED (Extra-low Dispersion) lens elements are superior in edge-to-edge sharpness, definition and contrast, as well as color registration, saturation and accuracy. No scanner manufacturer can match this level of optical performance.

Low-heat, high-accuracy LED light source



Most competitors's scanners use halogen or fluorescent lamps as light sources, but they require time to warm up and the heat they generate can cause damage to film. Nikon's COOLSCAN series are the only scan-

ners to employ LEDs as their source of light. LEDs are a stable, precise light source requiring neither maintenance nor warmup time, and there's no risk of your film suffering heat-related damage. LED illumination also assures stability in color characteristics, which contributes to faithful reproduction.

Nikon Color Management System



The Nikon Color Management System, or Nikon CMS, provides consistently accurate reproduction of image data on monitors and in printouts. This powerful tool permits the manipulation of colors in the calibrated RGB color spaces

before the data are transferred to the host application. Profiles detailing the color characteristics and the output device (monitor or printer) ensure high color-accuracy in almost any operating environment. Each scanner in Nikon's COOLSCAN lineup is compatible with ICC (International Color Consortium) version 4 standards.

Digital ICE⁴ Advanced™



Nikon's world-renowned optics and } innovative lighting help to optimize the effectiveness of Digital ICE⁴ Advanced™ components, making Nikon scanners and the automatic image correction technology an ideal match.

The latest editions of Nikon's COOLSCAN film scanners are the first ever to offer Digital ICE^{TM} , Digital ROC^{TM} , Digital GEM^{TM} and Digital DEE^{TM} all in one package. In addition to providing superb image correction, the power of these technologies also serves to improve the time- and cost-efficiency of your enterprise, regardless of scale.

Digital ICE^s Advanced™ are technologies developed by Applied Science Fiction

Comprehensive Scanner Control

rogressive features for high-quality images

▼ Color negative scanning






With other film scanners

▼Multi-sample scanning





With Multi-sample scanning (16x) Without Multi-sample scanning In order to clearly present the benefits of this function, the image's gamma values have been adjusted.

Improved color negative scanning

Nikon has upgraded its negative film scanning algorithm, significantly boosting image quality. Details that were once hidden in the darker portions of an image are now revealed. Correction of color casts found in color negative film has also been achieved, and monochrome negative film scans now offer smoother, more natural gradation.

Efficient autofocus delivers crisp, accurate images

Scanning curled film strips and film mounts of varying thickness means that the film plane will not always be in the same position relative to the lens. This makes accurate focusing essential in producing superior-quality scans. Nikon's new film scanners feature fast, precise autofocusing, for crisp, clear images quickly and easily. For even higher accuracy, you can select a particular focus point on an image about to be scanned.

Superior scans through Nikon's image control

By using image control features such as Unsharp Mask, Tone Curve and LCH editor during the scanning process, you are virtually guaranteed images of higher quality than would result from post-scan adjustments made using other image control software.

Multi-sample scanning for rich, noise-free images

The multi-sample scanning feature exposes details in the darker portions of photos while eliminating nearly all noise that can appear in those areas after only one scan. By making as many as 16 passes, multi-sample scanning only available with the SUPER COOLSCAN 9000 ED and 5000 ED — helps ensure

> faithful reproduction with smoother gradation.

ast, efficient scanning

Quick operation

Simply turn on the power, and the scanner is ready for operation

When using the SLIDE MOUNT ADAPTER MA-21, focus is achieved automatically once the scanner recognizes the type of film about to be scanned. You can begin scanning right away, as necessary exposure adjustments are made during image preview.

Batch scanning for increased productivity

You can easily initiate the automatic scanning of multiple frames. For example, using the STRIP FILM ADAPTER SA-21 with the 5000 ED or V ED enables batch scanning of as

many as 6 frames, or the 35mm STRIP FILM HOLDER FH-835S with the 9000 ED for up to 12 frames — and you can select different settings for each frame.

The 5000 ED can batch-scan up to 40 frames of an uncut roll of film (optional ROLL FILM ADAPTER SA-30), or up to 50 mounted slides (optional SLIDE FEEDER SF-210), giving you time-efficient, high-

quality scanning capability.

> The 5000 ED with SLIDE FEEDER SF-210



imple, user-friendly operation



astonished at how simple quality film scanning can be. Nikon Scan 4 features an intuitive GUI (Graphical User Interface) that allows you to quickly and easily preview images and even make necessary adjustments before scanning.

Easy Scanning Guide Nikon COOLSCAN and SUPER COOLSCAN film scanners come with an Easy Scanning Guide CD-ROM which features a Flash™ animated

explanation of the setup and operation of your new scanner. It also advises you on the quickest way to scan images based on the film type, the desired quality and the application.

with optimal contrast.





Scan Image Enhancer for

one-touch image correction

Without the trouble of compli-

cated control settings, the Scan

Image Enhancer automatically

adjusts brightness and color

saturation to produce images

ICE Stunning image corrections with Digital ICE⁴ Advanced™ technology

▼Digital ICE™



nmatched image restoration functions



Digital ROC™ ON



Digital GEM™ ON

Digital ICE™ OFF



Digital ROC™ OFF



Digital ICE™ (Image Correction & Enhancement)

Digital ICE™ works in tandem with Nikon's special LED illumination to remove surface defects like dust and scratches from a scanned image without altering the underlying composition, details or any other elements of the original image.

Digital ICE Professional™

The 9000 ED features Digital ICE Professional™ which is an advanced version of Digital ICE™ and compatible with Kodachrome film.

Digital ROC™ (Restoration Of Color)

Digital ROC™ restores colors lost through fading of the original film. After calculating the amount of color shift, it then instantly rebuilds and restores the deteriorated color values automatically. The results are faithfully rendered digitized images.

Digital GEM™ (Grain Equalization & Management)

Digital GEM™ reduces the effects of film grain. It reads the grain details in film, extracting all the vital data related to image quality and color. The resulting images are sharp, clear and devoid of grain clumping or graininess.

Digital DEE™ (Dynamic Exposure Extender)

Digital DEE™ makes its debut in Digital ICE4 Advanced™. This new feature helps reveal details that are sometimes lost in shadows and highlights. It compensates for the underexposure of backlit subjects or shaded areas as well as the overexposure of brightly lit areas.





- Notes:


 Digital ICE™ is compatible with both color film and color process monochrome film, but is not recommended for use with
- With the 5000 or V ED, when Digital ICE™ is applied to Kodachrome film, blurred images or localized loss of detail may occasionally occur, depending on the film used
- With the 9000 ED, when using Digital DEE™ to scan medium-format film in a Windows® operating environment, "Crop"


asy digital archive creation

Nikon View

Nikon View is a comprehensive digital imaging software package that enables you to store and check scanned images effortlessly It features searching and tagging functions that simplify digital archiving. And Nikon View's browser allows you to easily view, edit and print image files that have been saved to your computer's hard disk.





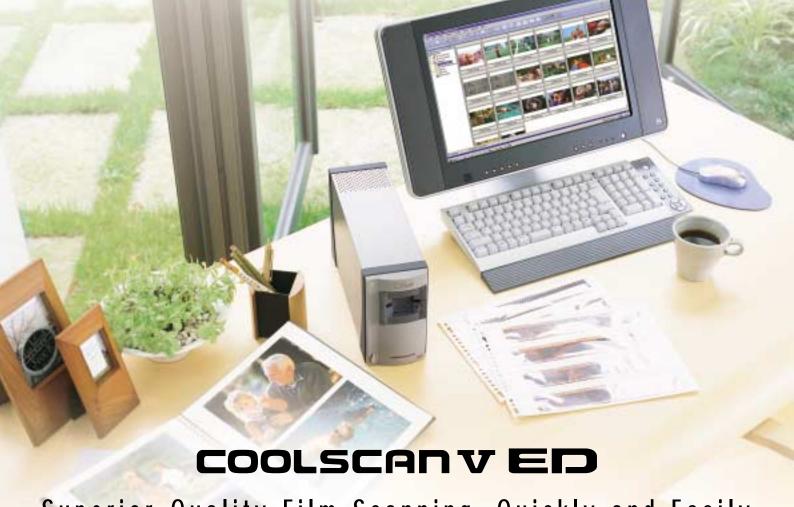

Superior-Quality Film Scanning, Quickly and Easily

E-mailing images to friends and family, web page design or digital archiving — interested in doing any of these things better and faster? Look no further than the COOLSCAN V ED desktop film scanner. Designed to be easy enough for first-time scanner users to operate smoothly, it

provides features and image quality previously found only in more expensive scanners. Factor in a selection of accessories that allows you to scan film of different types, and the result

> is a cost-effective, user-friendly, high-quality digital imaging tool.





High-quality scans the easy way

The COOLSCAN V ED's optical resolution of 4,000 dpi delivers 35mm film scans at a resolution of 21 megapixels (3,654 x 5,646 pixels). Turn 35mm memories into digital images that offer four times the resolution of a 5 effective-megapixel digital camera!

All you need to do is set the film, perform one-touch image preview and click the Scan button, and in about 38 seconds you'll have a high-quality digital image.





21-megapixel

Digital ICE™ automatically removes surface defects like

dust and scratches from your

■ 4,000 dpi true optical resolution ■ 14-bit A/D converter ■ New Scanner Nikkor ED lens ■ Fast 38-second scanning ■ High-quality CCD sensor ■ Direct film loading ■ New advanced image processing algorithm for color negative film ■ Quick AF & Quick Preview

■ Scan Image Enhancer ■ High-speed USB 2.0 interface ■ Digital ICE⁴ Advanced™ (Digital ICE Quad Advanced)

COOLSCAN V ED Accessories

Scan broad range of film types

Major Features

With the appropriate adapter attached, the COOLSCAN V ED can be used to scan many different types of film, including 35mm color reversal film and negative film strips, color slides and IX240 cartridge film.

STRIP FILM HOLDER FH-3 (optional) MEDICAL SLIDE HOLDER For scanning film strips (one to six frames) FH-G1 (optional) with the SLIDE MOUNT ADAPTER MA-21





STRIP FILM ADAPTER SA-21 (supplied) 35mm film; Direct and continuous loading

from two- to six-frame: thumbnail display continuous scanning and batch scanning are possible



SLIDE MOUNT ADAPTER MA-21 (supplied) Mounted 35mm slides: loads one slide at a time



IX240 FILM ADAPTER IA-20(S) (optional) Advanced Photo System (IX240) film

cartridge; thumbnail display, continuous scanning and batch scanning are possible



Crisp, colorful rendering of treasured moments

In addition to producing faithful, high-quality scanned images, the COOLSCAN V ED can also breathe new life into images that are scratched or have faded over time. Digital ICE⁴ Advanced[™] component Digital ICE[™] enables the scanner to detect and pick up the color from the original image, while doing away with dusts, scratches and other such imperfections. Digital ROC™ also works to restore the rich, brilliant color of faded images.

Create your own image library.

Why do you need a film scanner? To build a digital photo library? To create large, beautiful prints? With Nikon View, you can do both with surprising ease. Nikon View's searching and tagging functions simplify the creation and maintenance of digital archives, and its browser lets you view images in thumbnail form and enlarge them as well. E-mailing images to family and friends couldn't be simpler. And with advantages like multiple layout options and sizes, and super-high resolution, producing breathtaking prints from your own color printer is both easy and enjoyable.

Specifications

Negatives and positives, in color and monochrome

Slides with mounts 1.0 - 3.2 mm

thick, 49 - 50.8 mm wide. 35mm film strips

2 – 6 frames; strips of 1 – 6 frames can be scanned with optional STRIF FILM HOLDER FH-3 APS (IX240) film

Cartridges of 15, 25, and 40 frames

can be scanned with optional IX240 FILM ADAPTER IA-20(S)

Preparates (slide glass for microscope) Prepared slides (26 x 76mm, 0.8 -1.5mm thick) can be scanned with optional MEDICAL SLIDE HOLDER

Aperture/Scan range/Effective aperture

25.1 x 36.8mm/3,946 x 5,782 pixels/ Same as slide mount

25.1 x 38.0mm/3,946 x 5,959 pixels/

18.6 x 28.4mm/2,916 x 4,453 pixels/ 16.1 x 27.4mm

Scanning system

Fixed film, movable plane single-pass optical scanning system

Light source R. G. B and Infrared (IR) LEDs

Image sensor 3.964-pixel linear CCD image sensor

Color separation

Performed by RGB LEDs

Optical resolution Up to 4,000 pixels per inch

A/D conversion 14 bits per color

Density range

Output

Full color or grayscale at 8 or 16 bits per channel

Focus

Auto and manual; autofocusing point selectable

Interface LISB 2.0

Power requirements

AC 100 - 240V, 50/60Hz

Operating environment

Temperature: 10 - 35°C (50 - 95°F) Relative humidity: 20 - 60%

Dimensions (W x H x D) (3.8 x 6.8 x 12.4 in.)

Weight (approx.)

Orientation

Horizontal or vertical

Scanning time

(time to complete preview or scan when no options selected) Preview: 14 seconds Scan*: 38 seconds *Includes time required to display the scanned image



Speeding Into a New Era in Professional Film Scanning

The new SUPER COOLSCAN 5000 ED is the only choice for professional photographers who demand both quality

and speed. Boasting a true optical resolution of 4,000 dpi and 16 bit A/D conversion, the 5000 ED provides amazing image quality, amazingly fast. An unmatched scanning speed of 20 seconds per image brings desktop scanning

to an entirely new level. Optional adapters enhance productivity further by enabling the automatic scanning of

mounted slides and uncut rolls of film. The features, quality and speed found here make the SUPER COOLSCAN 5000 ED ideal for imaging professionals needing quality scans at the fastest speed possible.

Major Features

- 4,000 dpi true optical resolution 16-bit A/D converter New Scanner Nikkor ED lens Amazingly fast 20-second scanning ■Newly-developed, high-quality 2-line CCD sensor ■New advanced image processing algorithm for color negative film ■Multi-sample scanning
- Quick AF & Quick Preview Scan Image Enhancer High-speed USB 2.0 interface Digital ICE⁴ Advanced[™] (Digital ICE Quad Advanced)
- Optional SLIDE FEEDER SF-210 for up to 50 mounted slides Optional ROLL FILM ADAPTER SA-30 for up to 40 frames from a film strip

SUPER COOLSCAN 5000 ED Accessories

For efficient, versatile film scans

An impressive array of versatile adapters and holders enables users to scan a variety of film formats:



For scanning film strips (one to six frames) with the MA-21

MEDICAL SLIDE HOLDER

SLIDE MOUNT ADAPTER MA-21 (supplied) FH-G1 (optional)
For 26 x 76mm preparates (slide glass)



STRIP FILM ADAPTER SA-21 (supplied)










SF-210 (optional) For slide-mounted 35mm (135)

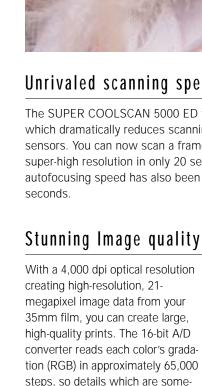

Unrivaled scanning speed

The SUPER COOLSCAN 5000 ED features a new low-noise, 2-line CCD sensor which dramatically reduces scanning time compared to conventional 1-line CCD

sensors. You can now scan a frame of 35mm film at super-high resolution in only 20 seconds. In addition, autofocusing speed has also been cut to a mere 4



2-line CCD sensor



In order to clearly present the benefits of this function, the image's gamma values have been adjusted.

Accomplish more in less time

times lost in shadows and high-

lights will appear in your digital

images. A multi-sample scanning

feature eliminates random noise

seen as pixel artifacts in dark,

shadowy areas.

The 5000 ED's USB 2.0 interface dramatically increases data transfer speed, while various adapters help maximize productivity. The optional ROLL FILM ADAPTER SA-30 enables scanning of uncut film rolls, while the optional SLIDE FEEDER SF-210 offers continuous scanning of mounted slides. When used together with the batch scanning function, you can leave the 5000 ED unattended while it scans up to 40 images with the SA-30 and up to 50 slides with the SF-210. No other film scanning system offers this level of productivity.

Specifications

Media

Negatives and positives, in color and monochrome

35mm slides Slides with mounts 1.0 – 3.2mm

thick, 49 - 50.8mm wide; optional SLIDE FEEDER SF-210 can be used to scan up to 50 slides with mounts 1.5mm thick

35mm film strips

2 - 6 frames (2 - 40 frames with optional ROLL FILM ADAPTER SA-30): strips of 1 - 6 frames can be scanned with optional STRIP FILM HOLDER EH-3 APS (IX240) film

Cartridges of 15, 25, and 40 frames can be scanned with optional IX240 FILM ADAPTER IA-20(S)

Preparates (slide glass for microscope) Prepared slides (26 x 76mm, 0.8 -

1.5 mm thick) can be scanned with optional MEDICAL SLIDE HOLDER

Aperture/Scan range/Effective aperture MA-21, SF-210

25.1 x 36.8mm/3,946 x 5,782 pixels/ Same as slide mount SA-21, SA-30

25.1 x 38.0mm/3,946 x 5,959 pixels/ 23.4 x 36.0mm

IA-20(S)

18.6 x 28.4mm/2,916 x 4,453 pixels/ 16 1 x 27 4mm

Scanning system

The 5000 ED's Multi-sample

scanning function makes as

many as 16 passes, revealing

details in shadowy areas while

virtually eliminating noise.

Fixed film, movable plane single-pass optical scanning system

Light source R, G, B and Infrared (IR) LEDs

Image sensor

Linear CCD image sensor with 3,964-pixel in two adjacent lines

Color separation Performed by RGB LEDs

Optical resolution

Up to 4,000 pixels per inch

A/D conversion 16 bits per color

Density range

Output

Full color or grayscale at 8 or 16 bits per channel

Focus

Auto and manual; autofocusing point selectable

Power requirements

AC 100 - 240V, 50/60Hz

Operating environment Temperature: 10 – 35°C (50 – 95°F) Relative humidity: 20 - 60%

Dimensions (W x H x D)

96 x 172 x 315mm (3.8 x 6.8 x 12.4 in.)

Weight (approx.)

Orientation

The 5000 ED with

ROLL FILM ADAPTER SA-30

Horizontal or vertical (with SF-210: horizontal only; with SA-30: vertical

Scanning time

(time to complete preview or scan when no options selected) Preview: 11 seconds Scan*: 20 seconds *Includes time required to display the





A Breakthrough in Professional Multi-Format Film Scanning

The SUPER COOLSCAN 9000 ED's multi-format capability is specifically designed for imaging professionals. Scanning is possible for 120/220, 35mm, 6 x 7, 6 x 9, 16mm, electron

microscope and other film formats. The 9000 ED's large-diameter Scanner Nikkor ED lens, 3-line CCD image sensor and LED light source with rod dispersion have all been improved for enhanced image quality with faster scanning speeds. These premium fea-

> tures give you the leading edge in professional desktop imaging.



Major Features

■ Multiple film formats (120/220, 35mm, etc.) ■ 4,000 dpi true optical resolution ■ 16-bit A/D converter ■ Large-diameter new Scanner Nikkor ED lens ■ Improved rod dispersion LED illumination
■ High-speed scanning (35mm slide film: 40 seconds; 6 x 9: 185 seconds)
■ Newly-developed, high-quality

3-line CCD sensor ■ New advanced image processing algorithm for color negative film ■ Multi-sample scanning ■ Quick AF & Quick Preview ■ Highspeed IEEE 1394 interface ■ Scan Image Enhancer ■ Digital ICE Advanced™ (Digital ICE Quad advanced) with Digital ICE Professional™

SUPER COOLSCAN 9000 ED Accessories

Film holder variety covers multiple formats

An impressive array of versatile film holders enables users to scan a variety of film formats:

List of holders

35mm STRIP FILM HOLDER FH-835S

• 35mm strip film with 1 to 12 frames,

up to 2 strips 35mm MOUNTED FILM HOLDER FH-835M (supplied)

Width: 49~50.8mm (1.9~2.0 in.) Thickness: 1.0-3.2mm (0.04-0.13 in.) Up to 5 slides

120/220 STRIP FILM HOLDER FH-869S (supplied)

> 6 x 4.5 strip film with 1 to 4 frames • 6 x 6 strip film with 1 to 3 frames

•6 x 7/8/9 strip film with 1 to 2 frames 120/220 MOUNTED FILM HOLDER

FH-869M (optional)

•6 x 4.5/6 film with 1 frame •6 x 7/8/9 film with 1 frame

120/220 STRIP FILM HOLDER WITH GLASS FH-869G (optional)

•6 x 4.5 strip film with 1 to 4 frames

• 6 x 6 strip film with 1 to 3 frames •6 x 7/8/9 strip film with 1 to 2 frames

120/220 FILM ROTATED HOLDER WITH GLASS FH-869GR (optional

• 6 x 4 5 strip film 6 x 6 strip film

•6 x 7/8/9 strip film

• 59 x 82mm electron microscope film • 24 x 58mm panoramic film

 24 x 65mm panoramic film 16mm FILM HOLDER FH-816 (optional)

Film type

• 16mm film up to 3 strips MEDICAL SLIDE HOLDER FH-8G1

Slide glass type 26 x 76mm preparates (slide glass) up to 3 frames

Max_total thickness: 2mm



Nikon Scan 4's comprehensive image control options afford you freedom in image quality control and enhancement, helping to ensure high-quality professional printing

Pro quality and multi-format versatility



3-line CCD sensor

The SUPER COOLSCAN 9000 ED scans a variety of film formats, including medium format (120/220), 35mm (135) format, 16mm, electron microscope and preparates (glass slides for a microscope). To reproduce the high definition of mediumformat films, the 9000 ED boasts special optics and a new 3-line CCD image sensor. The Scanner Nikkor ED

lens has a larger, specially designed diameter which ensures high-resolution reading of medium-format film while delivering unparalleled optical purity to the CCD.

Crisp, vivid, color-true images

With 4,000 dpi optical resolution and 16-bit A/D conversion, astoundingly vivid images are produced. For example, using 8,946 x 8,946-pixel image data in a 6 x 6 format, over 65,000 steps per color (RGB) are at the 9000 ED's disposal. The LED light source is also specially designed for multi-format scanning, with LEDs for each color (RGB plus IR) using dispersed rod illumination (see illustration). The result is a smoother reproduction of picture grain and more accurate reading and rendering of every color.

Expert image control features

The SUPER COOLSCAN 9000 ED with Nikon Scan 4 provides you with comprehensive digital darkroom capability. Enhanced LED illumination has enabled the incorporation of Digital ICE Professional™, which is effective with Kodachrome film. With only a few pre-scan adjustments, you can achieve high-quality images that remain faithful to the original color composition — something other imagecontrol applications struggle with. Nikon's Color Management System (CMS) also ensures that every shade and hue can be accurately reproduced in nearly all operating environments.



Aperture/scan range (pixels) FH-835S 25.4 x 37.5mm/4.000 x 5.904

1 - 3 prepared slides (26 x 76mm 0.8 - 2mm thick) can be scanned with optional MEDICAL SLIDE HOLDER FH-8G1

FH-835M 37.5 x 25.6mm/5,905 x 4,032

Specifications

FH-869S, FH-869G

6 x 4.5: 56.9 x 42.5mm/8,964 x 6,696 6 x 6: 56.9 x 56.9mm/8.964 x 8.964 6 x 7:56 9 x 70 0mm/8 964 x 11 016

6 x 8: 56.9 x 77.5mm/8.964 x 12.204 **6 x 9:** 56.9 x 83.7mm/8,964 x 13,176

5.9 x 8.2: 56.9 x 83.7/8,964 x 13,176 FH-816

15.0 x 21.48mm/2,362 x 3,384 FH-8G1 46.02 x 24.0mm/7.248x 3.780

Scanning system

Fixed optical, movable media, parallel single-pass scanning system

R, G, B and Infrared (IR) LEDs; light source with rod disperser and light

output slot Image sensor

10.000-pixel, three-line monochrome linear CCD image sensor

Color separation Performed by RGB LEDs Optical resolution

Up to 4,000 pixels per inch A/D conversion

16 bits per colo Density range

Output

 $\Lambda\Lambda\Lambda\Lambda\Lambda\Lambda\Lambda$

Rod dispersion LED illumination

Full color or greyscale at 8 or 16 bits per channel

Auto and manual; autofocusing point

selectable Interface IFFF 1394

Power requirements AC 100-240 V, 50/60 Hz Operating environment

Temperature: 10 - 35°C (50 - 95°F) Relative humidity: 20 - 60%

Dimensions (W x H x D) 249 x 498 5 x 202 mn

(9.8 x 19.6 x 8.0 in.) Weight (approx.)

Scanning time (time to complete preview or scan

when no options selected) 35 slide (with FH-835M)

Preview: 13 seconds Scan*: 40 seconds

120/220 slide (with FH-869S) Preview: 38 seconds

Scan*: 185 seconds *Includes time required to display the scanned image

Nikon Scan 4 System Requirements

Windows

CPU Pentium® 300MHz or faster

Windows* 98SE, Windows* Me, Windows* 2000 Professional, Windows* XP OS

Home Edition, Windows® XP Professional pre-installed model

RAM³ 128MB or more (512MB or more recommended)

Hard disk*? 40MB required for installation (200MB recommended), with an additional

200MB of free disk space available while Nikon Scan is running

800 x 600 with 16-bit color (full color recommended) Display USB***: Built-in USB 1.1 ports, USB 2.0 Interface

IEEE 1394: OHCI-compliant IEEE 1394 interface required

Others CD-ROM drive required for installation

Nikon View System Requirements

Windows

CPU Pentium® 300MHz or faster

Windows® 98SE, Windows® Me, Windows® 2000 Professional, Windows® XP OS

Home Edition, Windows® XP Professional pre-installed model

RAM 64MB or more recommended Hard disk 60MB required for installation

Display 800 x 600 with 16-bit color (full color recommended)

Others CD-ROM drive required for installation

Macintosh

Power PC G3 or later (G4 or later recommended) CPU Mac® OS 9 (9.1 or later), Mac® OS X (10.1.5 or later) os RAM³ Mac® OS 9: 64MB or more (256MB or more recommended) Mac® OS X: 128MB or more (512MB or more recommended)

70MB required for installation (200MB recommended), with an additional Hard disk**

200MB (Mac* OS 9) or 550MB (Mac* OS X) of free disk space available while Nikon Scan is running

800 x 600 with 16-bit color (full color recommended) Display USB***: Built-in USB 1.1 ports, USB 2.0 Interface Firewire: Only built-in Firewire ports supported

Others CD-ROM drive required for installation

> More memory may be required depending on film type, scan size, resolution, bit depth, the number of scans performed in each session, the film holder or adapter used, and whether Digital ROC™ or Digital GEM™ are used. A system

with more than the minimum amount of memory is recommended. More free disk space may be required depending on the film type and number

of frames. Nikon recommends having as much free disk space as possible

when running Nikon Scan

Depending on the type of interface installed, USB will operate at high speed (USB 2.0 only; maximum transfer rate 480 Mbps) or full speed (USB 1.1/USB 2.0; maximum transfer rate 12 Mbps). Computers running Windows* XP and Windows* 2000 Professional with a USB 2.0 interface support high-speed USB. For more information, consult the manufacturer. Users of Windows® XP, Windows* 2000 Professional or Mac* OS X whose computer is not equipped with USB 2.0 can install a RATOC PCIU3U USB 2.0 interface board (for more information, visit Ratoc Systems English-language web site at

http://www.ratocsystems.com/english/index.html)

Macintosh

iMac™, iMac™ DV, Power Macintosh® G3 (Blue & White), Power Mac™ G4 or Models later, iBook™, PowerBook® G3 or later (only built-in USB ports supported) os Mac® OS 9.0 - 9.2 (only built-in USB ports are supported), Mac® OS X (10.1.3

or later)

RAM 64MB or more recommended Hard disk 60MB required for installation

Display 800 x 600 with 16-bit colors (full color recommended)

Others CD-ROM drive required for installation

Scanning times and other performance-related statistics are based on Nikon internal testing results







Digital ICE⁴ Advanced™ is Digital ICE™, Digital ROC™, Digital GEM™ and Digital DEE™ Digital ICE⁴ Advanced™ are technologies developed by Applied Science Fiction.

Digital ICE Professional™ is technology developed by Applied Science Fiction.

Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Macintosh® and FireWire® are registered trademarks or trademarks of Apple Computer Inc. in the United States and/or other countries

Products and brand names are trademarks or registered trademarks of their respective companies.

Specifications and equipment are subject to change without any notice or obligation on the part of the manufacturer. ©2003 NIKON CORPORATION



WARNING

TO ENSURE CORRECT USAGE, READ MANUALS CAREFULLY BEFORE USING YOUR EQUIPMENT. SOME DOCUMENTATION IS SUPPLIED ON CD-ROM ONLY.



NIKON CORPORATION

Fuji Bldg., 2-3, Marunouchi 3-chome, Chiyoda-ku, Tokyo 100-8331, Japan www.nikon-image.com/eng/



